


LOSI 22S DRAG CAR WHEELIE BAR INSTRUCTIONS

1. REMOVE STOCK BALL FROM ROD END.

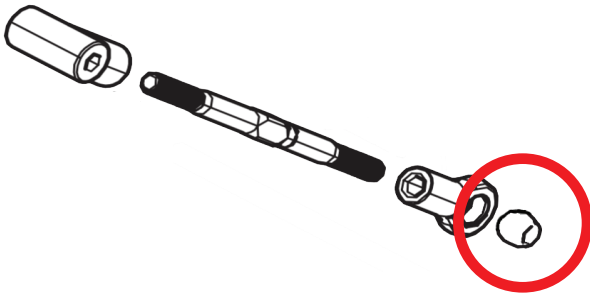

2. INSTALL STOCK BALL IN OPEN ROD END OF INCLUDED LINK.

